SHARP®

# CAROUSEL® II MICROWAVE OVEN

(K)

## MODEL R-7280(W)M/(B)M

## OPERATION MANUAL

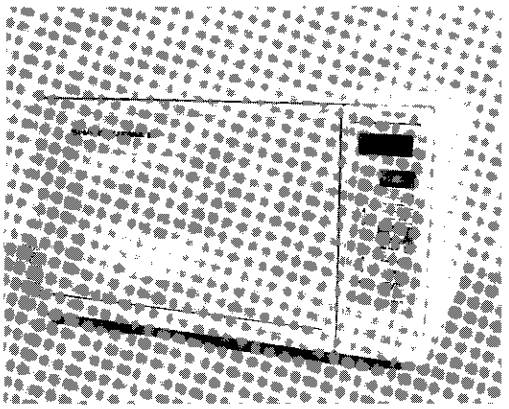

R – 7280 (W) M

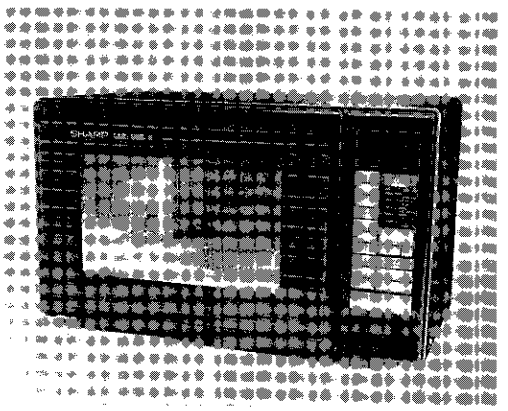

R – 7280 (B) M

## CONTENTS


Installation Instructions ..... 1
Warning-This Appliance must be Earthed ..... 1
Specifications ..... 1
Oven Diagram ..... 2
Special Notes ..... 3
Operation of Auto-Touch Control Panel ..... 4
Clock Setting ..... 4
Minute Timer Setting ..... 5
Auto Start Setting ..... 5
Stop/Clear ..... 6
To Cancel a Programme During Cooking ..... 6
Microwave Cooking ..... 7
Time Cooking ..... 7
Auto Minute ..... 8
Easy Reheat ..... 9
Easy Defrost ..... 10
MORE/LESS Pad ..... 12
Care and Cleaning ..... 13
Service Call Check ..... 13

# INSTALLATION INSTRUCTIONS

1. Visual check after unpacking:
   Remove all packing materials from the oven cavity. Check the unit for any damage, such as a misaligned door, damaged door seals around the door or dents inside the oven cavity or on the door. If there is any damage, please do not operate the oven until it has been checked by your dealer or a SHARP AUTHORISED SERVICE CENTRE and repaired, if necessary.
2. The unit should not be installed in any area where heat and steam are generated, for example, next to or above a conventional oven unit.
3. Neither the manufacturer nor the distributors can accept any liability for damage to the machine or personal injury for failure to observe the correct electrical connecting procedure.
   The A.C. voltage must be single phase 240V, 50Hz.
4. Ask for professional advice when the unit is built in.

# WARNING—THIS APPLIANCE MUST BE EARTHED

**IMPORTANT**

The wires in this mains lead are coloured in accordance with the following code:

| | |
|---|---|
| Green-and-yellow | : Earth |
| Blue | : Neutral |
| Brown | : Live |

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.
The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol ⏚ or coloured green or green-and-yellow.
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

* In the U.K., the appliance must be connected to the supply by a properly earthed 3 pin plug (minimum capacity 13 amp). If a BS1363 fused plug is used, it should be fitted with a 13 amp fuse to BS1362. Seek professional advice if you are unsure of the correct procedure for the above.

# SPECIFICATIONS

| | |
|---|---|
| AC Line Voltage: | Single phase 240V, 50Hz |
| AC Power Required: | 1.3 kW |
| Output Power: | 660 W (2 litre water load) |
| Frequency: | 2450 MHz |
| Outside Dimensions: | 520mm(W) x 318mm(H) x 393mm(D) |
| Cavity Dimensions: | 345mm(W) x 217mm(H) x 364mm(D) |
| Oven Capacity: | 27 litre (1.0 cu.ft.) |
| Cooking Uniformity: | Turntable system |
| Weight: | Approx. 17.5 kg |

As a part of our policy of continuous improvement, we reserve the right to alter design and specification without notice.

IN THE UK., "THIS APPARATUS COMPLIES WITH THE REQUIREMENTS OF BS-800 AND EEC-499."
IN ORDER TO COMPLY WITH THE EEC DIRECTIVE: 82/499/EEC, SHORT COOKING OPERATIONS SHOULD NOT BE PERFORMED MORE FREQUENTLY THAN ONCE PER MINUTE.

# OVEN DIAGRAM

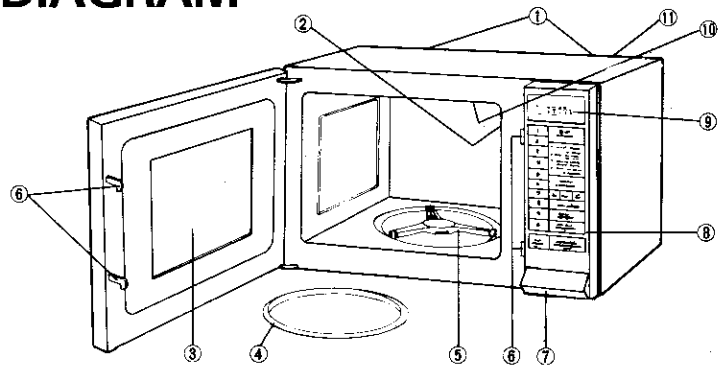


1. Ventilation openings
2. Oven lamp
3. Oven door with see through window
4. Removable turntable
5. Roller stay
6. Door latches
7. Door open button
8. Auto-Touch Control Panel
9. Digital readout
10. Waveguide cover
11. Access cover for oven lamp replacement

## Auto-Touch™ Control Panel

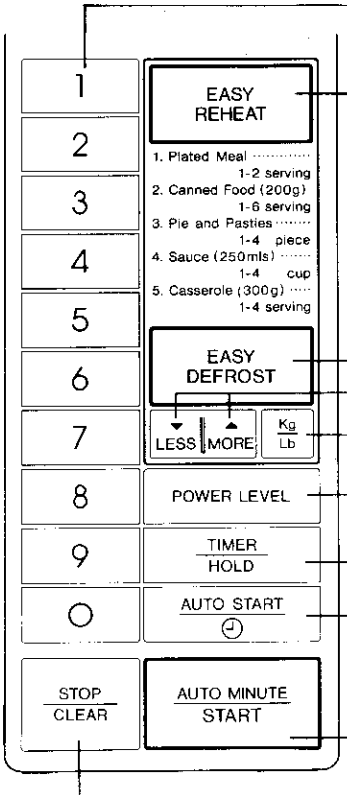


**NUMBER PAD**
Touch to enter cooking times or clock time.

**EASY REHEAT PAD**
Touch to reheat most popular food.

**EASY DEFROST PAD**
Touch to defrost meat by entering weight only.

**MORE (▲)/LESS (▼) PAD**
Touch to allow you to cook food your own taste.

**Kg/Lb CONVERSION PAD**
Touch to change the unit of weight with EASY DEFROST.

**POWER LEVEL PAD for setting variable cooking control**
Touch to select microwave power.
Count up automatically by holding your finger on the pad.

**TIMER/HOLD PAD**
Touch to set minute timer.

**AUTO START/CLOCK ( ◴ ) PAD**
Touch to set clock or AUTO START time.

**AUTO MINUTE/START PAD**
Touch to cook for 1 minute at HIGH or increase 1 minute at variable cooking during cooking.
Touch to start oven.

**STOP/CLEAR PAD**
Touch to erase during programming.
Touch once to stop operation of oven during cooking; touch twice to cancel cooking programme.

# SPECIAL NOTES

(a) The oven lamp comes on whenever the door is opened.

(b) Metal items should not be used in the oven during the microwave cooking cycle except those items specially supplied with the oven for microwave cooking or as instructed in the cookbook.

(c) In common with other forms of heating food, exceeding the recommended cooking times may result in burning the oven contents and damaging your oven. When cooking foods with a high sugar or fat content eg: Christmas Pudding, Mince Pies, Fruit Cake, be sure to follow the cooking instructions carefully.

(d) The door seal is designed to prevent leakage of microwave energy during cooking. Occasionally moisture may appear around the oven door. This is not abnormal and does not necessarily indicate the oven is leaking microwave energy.

(e) The roller stay is removable and should be set in the right place and the turntable should be seated on it.

(f) Should you wish to use a browning dish, we would suggest that a suitable insulator be placed between turntable and browning dish in order to prevent the glass turntable and roller stay from damage by heat stress. It is important that the recommended preheating time of the dish should not be exceeded. If you do not have a suitable insulator such as a microwave and heat proof dinner plate, a specially designed rack is available from Sharp dealers as an optional extra.

(g) Always remove tight fitting lids or seals from containers before heating or cooking in the microwave oven. (eg: Jars, Take-Away Food Containers) Pressure will build up inside the container thus leading to an explosion, even after cooking has stopped.

(h) When cooking meat, we recommend the use of a microwave proof roasting rack and dish to collect any excess meat juices.

**WARNING – CAUTION**

(i) **Liquids** may be heated and boiled in the microwave oven, but, as with any other form of heating liquids, **great care** should be taken. Please ensure that the liquid is left standing for **at least 20 seconds** in the oven after it is switched off. As always when handling boiling liquids, **great care** should be taken on removing the liquids from the oven. These considerations are particularly important when water is being boiled in cups, mugs, or vessels of a similar size as there is a risk that bubbles may combine to form a large bubble inside the container which may displace the water upwards. The boiling water being displaced out of the container may injure the oven user.

(j) **Do not** cook eggs in the shell. Pressure will build up inside the shell and it will explode (even after cooking has stopped). Do not reheat cooked eggs unless they are scrambled or chopped. Puncture the yolk before cooking eggs.

(k) **Do not** prepare popcorn in the oven without popcorn popper. The results are poor and it can be dangerous.

(l) **Do not** place cans of food in the oven. SEE SPECIAL NOTES (b).

(m) **Do not** heat oil or fat for deep frying. The temperature of the oil cannot be controlled and it may overheat.

(n) **Do not** operate the oven empty. The appliance should not be operated without food in the oven, operation in this manner is likely to damage the appliance.

(o) **Do not** attempt to operate the oven if the safety door switches have been damaged.

(p) **Do not** attempt to operate the oven whilst any object is caught or jammed between the door and the oven.

(q) **Do not** operate the oven if it is damaged until it has been repaired by a properly qualified service technician trained by Sharp. (eg: The food through overcooking catches fire, causing damage to the oven cavity or door.) It is particularly important that the oven door closes properly and that there is no damage to:
(1) Door (bent), (2) Hinges and Latches (broken or loosened), (3) Door Seals and Sealing Surfaces (broken or cracked).

(r) **It is dangerous to** have the oven adjusted or repaired by anyone except a properly qualified service technician trained by Sharp.

(s) **Do** keep the door seal and door surfaces clean by wiping regularly with a damp cloth, so that any grease, soil or spatters are not allowed to build up. Such a build up could result in leakage of microwave energy from the oven.

# OPERATION OF AUTO-TOUCH™ CONTROL PANEL

Your new Auto-Touch microwave oven uses a microprocessor, the electronic brain that provides the wide variety of cooking programmes which could not be achieved by conventional control methods. The operation of the oven is controlled by touching the appropriate pads arranged on the surface of the control panel. An entry signal tone should be heard each time you touch the control panel to make a correct entry. If you do not hear this sound,

1) You have not used enough pressure in touching the pad.
2) You have made more entries than the control panel will accept.
3) You have made an incorrect entry.

In addition to the entry signal tone, an audible signal will sound for approximately 2 seconds at the end of the cooking cycle.

* Make sure the oven is plugged into a power point. When the oven is plugged in, the display show [88:88] , flashing on and off each second. Touch the STOP/CLEAR pad: [ 1:00] will appear.
* You cannot programme the oven if the door is not closed firmly.
* During cooking, the programme cannot be changed until the STOP/CLEAR pad is touched twice. All functions are locked in to prevent accidental changes.
  If food does not seem to be heating properly, check the indicator. Be sure the Variable Cooking Control is on the proper setting.
* If the electrical power supply to your microwave oven should be interrupted, the display will intermittently show [88:88] after the power is reinstated. If this occurs during cooking, the programme will be erased. The time of day will be also erased. Simply reset the clock for the correct time of day.

## Clock Setting

* Suppose you want to enter the correct time of day 12:30 (A.M. or P.M.)

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1 | Touch the AUTO START/CLOCK pad. | AUTO START | 0 |
| 2. | Enter the correct time of day by touching the numbers in sequence. | 1 2 3 0 | 12 30 |
| 3. | Touch the AUTO START/CLOCK pad again. | AUTO START | 12:30 |

NOTE: 1. This is a 12 hour clock. [ERROR] will appear in the readout if you attempt to enter an incorrect clock time. For example, if you attempt to enter 8:61 or 13:00, [ERROR] and incorrect clock time will appear repeatedly. To erase [ERROR] touch the STOP/CLEAR pad. If you accidentally touch more than 4 number pads, the last 4 numbers you have touched will appear on the display.

2. If the oven is in cooking or minute timer mode and you wish to know the time of day, simply touch the AUTO START/CLOCK pad. As long as your finger is touching the AUTO START/CLOCK pad, the time of day will be displayed. This checking operation does not interfere with cooking time, or minute timer.

# Minute Timer Setting

The Auto-Touch control panel can be used as a timer for timing up to 99 minutes, 99 seconds. There is no cooking involved.

* Suppose you want to time a 3 minute long distance phone call.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Enter desired time. | 3 0 0 | 3 00 |
| 2. | Touch the TIMER/HOLD pad. | TIMER HOLD | 3.00 |

The timer will begin counting down to zero. When the timer reaches zero, the signal will sound. The time of day will reappear on the display.
To cancel the minute timer during operation, touch the STOP/CLEAR pad and the time of day will reappear.
The HOLD pad is used for programming standing time (0% power).

# Auto Start Setting

If you wish to programme your oven to begin cooking automatically at a designated time of day, follow this procedure:

* Suppose you want to start cooking a stew for 20 minutes on MED at 4:30 this afternoon.
  Before setting, check to make sure the clock is showing the correct time of day.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Enter the desired start time. | 4 3 0 | 4 30 |
| 2. | Touch the AUTO START/CLOCK pad. | AUTO START | AUTO 4:30<br>The colon(:) will flash on and off. |
| 3. | Enter the desired cooking time. | 2 0 0 0 | AUTO 20 00 |

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 4. | Touch the POWER LEVEL pad three times. | POWER LEVEL x 3 | AUTO MED 20:00 |
| 5. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | Suppose you are setting at 1:00 P.M. AUTO 1:00 The oven will start cooking at 4:30 P.M. MED 20:00 COOK |

The cooking time will count down to zero. When the timer reaches zero, all indicators will go out and an audible signal will sound. The time of day will reappear on the display.

NOTE: The Auto Start feature can be used for any of the programmes except Easy Defrost, Auto Minute and Minute Timer.
Once you have correctly programmed the oven for Auto Start, the correct time of day (not the Auto Start time) will appear on the display. To check the programmed Auto Start time, touch the AUTO START/CLOCK pad. The programmed Auto Start time will appear on display as long as your finger is touching the pad. Checking the Auto Start time will not interfere with the operation of the oven.
To cancel Auto Start, simply touch STOP/CLEAR pad twice.

## Stop/Clear

Use the STOP/CLEAR pad to:
1. Erase if you make a mistake during programming.
2. Cancel minute timer.
3. Stop the oven temporarily during cooking.

## To Cancel a Programme During Cooking

If you are in the process of cooking and wish to stop the oven and cancel the entire cooking programme, follow either of the steps below:

1. Open the oven door. 2. Close the door. 3. Touch the STOP/CLEAR pad.

or

1. Touch the STOP/CLEAR pad twice.

# MICROWAVE COOKING

## Time Cooking

There are five preset power levels.

| Approximate percentage of microwave power for each power level. | |
|---|---|
| HIGH (Touch the POWER LEVEL pad once) | 100% |
| MED HIGH (Touch the POWER LEVEL pad twice) | 70% |
| MED (Touch the POWER LEVEL pad three times) | 50% |
| MED LOW/DEFROST (Touch the POWER LEVEL pad four times) | 30% |
| LOW (Touch the POWER LEVEL pad five times) | 10% |

Many foods are cooked at HIGH (100%) for best results. The POWER LEVEL pad allows you to select the rate of microwave cooking, but the oven will automatically operate at HIGH if the POWER LEVEL pad is not touched.
Your oven can be programmed for up to 3 automatic cooking sequences, switching from one variable power setting to another automatically.

* Suppose you want to heat soup for 2 minutes 30 seconds at MEDIUM.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Enter desired cooking time. | 2 3 0 | 2 30 |
| 2. | Touch the POWER LEVEL pad three times. | POWER LEVEL x 3 | MED 2 . 30 |
| 3. | Touch AUTO MINUTE/START pad. | AUTO MINUTE START | MED 2 . 30 COOK |

To program a second sequence, for example 1 minute 30 seconds on HIGH, touch;

| | | | |
|---|---|---|---|
| 3. | After Step 2, enter desired time for second cooking time. | 1 3 0 | 1 30 |
| 4. | Touch AUTO MINUTE/START pad. | AUTO MINUTE START | MED 2 . 30 COOK |

The timer will count down the first sequence and when it reaches zero, the second sequence will appear on display and begin to count down. When the timer reaches zero, all indicators will go out and an audible signal will sound. The time of day will appear on the display.

NOTE: 1. When the door is opened during the cooking process, the cooking time in the readout automatically stops. The cooking time starts to count down again when the door is closed and the AUTO MINUTE/START pad is touched.
2. If the POWER LEVEL pad is touched after reaching the lowest readout (LOW), the display will return to the starting point. (HIGH)
3. If HIGH is selected as the final sequence, it is not necessary to touch the POWER LEVEL pad. If HIGH is programmed as the first or second sequence, the POWER LEVEL pad must be touched.
4. HOLD cannot be programmed as the first cooking sequence or used alone. If HOLD is used as the first sequence, oven will begin counting down as a minute timer.
5. The turntable rotates both clockwise and counterclockwise depending on the position of motor when starting the cook cycle.

# Auto Minute™

The "Auto Minute" system allows you to cook for an extra minute at HIGH by simply touching the "Auto Minute" pad. You can also extend cooking time in multiples of 1 minute by repeatedly touching the "Auto Minute" pad during a cooking programme.

* Suppose you want to cook 1 minute at HIGH easily.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | HIGH 1.00 COOK<br>The timer begins to count down. |

When the timer reaches zero, all indicators will go out and an audible signal will sound.
The time of day will reappear on the display.

NOTE: Auto Minute can only be entered within 1 minute after cooking, closing the door, or during cooking. Auto Minute also starts the oven if any programme is on display.

* Suppose you want to increase 1 minute cooking time during 5 minutes at MED HIGH cooking.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Enter desired cooking time. | 5 0 0 | 5 00 |
| 2. | Touch the POWER LEVEL pad twice. | POWER LEVEL x 2 | M•HIGH 5.00 |
| 3. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | M•HIGH 5.00 COOK<br>The timer begins to count down.<br>M•HIGH 1.30 COOK |
| 4. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | M•HIGH 2.29 COOK<br>The cooking time is increased 1 minute and continues to count down. |

The cooking time will count down to zero. When the timer reaches zero, all indicators will go out and an audible signal will sound. The time of day will reappear on the display.

NOTE: 1. The cooking time can be increased in multiples of 1 minute by repeatedly touching the "AUTO MINUTE" pad during the cooking programme.
2. Auto Minute can be used for any of the programmes except Easy Reheat and Easy Defrost.

# Easy Reheat

The Easy Reheat allows you to reheat many of your favorite foods automatically without setting time or power level.

* Suppose you want to reheat 3 pieces of pie.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Touch the EASY REHEAT pad. | EASY REHEAT | REHEAT F00D flashes on and off. |
| 2. | Select desired Easy Reheat setting. (Touch 3 to reheat pie.) | 3 | REHEAT 3-1 3 lights and 1 flashes on and off. |
| 3. | Touch number pads to enter quantity. If 1 cup or 1 serving is selected, it is not necessary to enter the quantity. | 3 | REHEAT 3-3 |
| 4. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | REHEAT HIGH COOK 7.40 |

The cooking time will count down to zero. When the timer reaches zero, all indicators will go out and an audible signal will sound. The time of day will reappear on the display.

| EASY REHEAT | | | |
|---|---|---|---|
| **SETTING** | **FOOD** | **QUANTITY** | **PROCEDURE** |
| 1 | Plated Meal<br>• Meat, Potato, 2 vegetable | 1—2 servings | Cover with plastic wrap.<br>IMPORTANT: When reheating 2 plates, reverse plates after half of reheating time. |
| 2 | Canned Food<br>• Soup • Baked Beans<br>• Spaghetti<br>• Milk Pudding<br>• Vegetable | 1—6 servings<br>(1 serving = 200g) | Pour into the bowl.<br>Cover with plastic wrap.<br>Stir after heating. |
| 3 | Pie and Pasties<br>• Meat Pie<br>• Sausage Roll<br>• Cornish Pasty<br>• Cheese Onion Pesty<br>• Meat Vegetable Pasty | 1—4 pieces<br>1 piece = 200g | Place on a plate with kitchen paper or plastic rack.<br>No cover. |
| 4 | Sauce<br>• Savory<br>• Sweet<br>• Custard | 1—4 cups<br>(1 cup = 250ml) | Pour into the bowl or jug.<br>No cover.<br>Stir after heating. |
| 5 | Casserole | 1—4 servings<br>(1 serving = 300g) | Cover with lid or plastic wrap.<br>Stir after heating. |

# Easy Defrost

The Easy Defrost allows you to defrost meats by entering weights only.

* Suppose you want to defrost 1.0 kg Chicken pieces.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Touch the Easy Defrost pad.<br>If you want to enter the weight of food by Lbs or oz, simply touch Kg/Lb (CONVERSION) pad. Then kg will disappear, and Lbs and oz will appear. | EASY DEFROST | DEFROST kg<br>kg flashes on and off. |
| 2. | Touch number pads to enter weight. | 1 0 | DEFROST 1.0 kg<br>kg stops flashing and remains on display. |
| 3. | Touch the AUTO MINUTE/START pad. | | HIGH<br>DEFROST COOK 19.10<br>The timer will begin to count down. After about 13 min, audible signals will sound 4 times and oven is stopped. Cook indicator will go off. TURN OVER will be displayed countinuously. |
| 4. | Open the door. Turn Over meat.<br>Close the door. | | PRESS START will be displayed continuously. |
| 5. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | M LOW<br>DEFROST COOK 5.50<br>The timer will begin counting down to zero, when the timer reaches zero, an audible signal will sound. STAND will be displayed continuously. |

When door is opened or STOP/CLEAR pad is touched, STAND will go out and the time of day will appear on the display.

NOTE: 1. You can use the CONVERTING PAD only before step 2. Once the unit is converted, the determined unit will remain unless the power is interrupted.
2. When keying in the weight, the unit must be rounded off to the nearest 0.1 kg or 1 oz.
ex. 1.65 kg—1.7 kg (step 2)
3. Foods weighing more or less than the quantity listed in the guide should be defrosted following guidelines in the cookbook.
4. If the weight more than 5 kg (11 Lb) or less than 0.2 kg (7 oz) is entered and START pad is touched, ERROR and the weight will be displayed repeatedly. The STOP/CLEAR pad has to be touched to reprogramme the oven.
5. The timing of TURN OVER varies according to the quantity of food. The TURN OVER display will appear after half of the total cooking time. (step 3)

# Easy Defrost Chart

| Food | Quantity min.—max. | Procedure |
|---|---|---|
| Steak Chops | 0.2 kg—3 kg<br>7 oz—6 Lb 10 oz | Shield thin end of chops or steaks with foil.<br>Position the food with thinner parts in the centre in a single layer. If pieces are stuck together try to separate as soon as possible.<br>When oven has stopped, turn over and shield the warm portions.<br>After defrost time, stand 10—15 mins. |
| Poultry | 1 kg—5 kg<br>2 Lb 3 oz—11 Lb | Remove from original wrapper.<br>Shield wing and leg tips with foil.<br>Place breast side down. When oven has stopped, turn over and shield the warm portions. After defrost time, stand wrapped in foil for 15—30 mins.<br>NB After standing run under cold water to remove giblets if necessary. |
| Minced Beef | 0.2 kg—3 kg<br>7 oz—6 Lb 10 oz | Place frozen minced beef. When oven has stopped, turn over and shield the warm portions. After defrost time, stand 10—15 mins. |
| Chicken Pieces | 0.2 kg—3 kg<br>7 oz—6 Lb 10 oz | Shield the edge with foil.<br>When oven has stopped, turn over and shield the warm portions. After defrost time, stand wrapped in foil for 10—15 mins. |
| Beef/Pork Joint  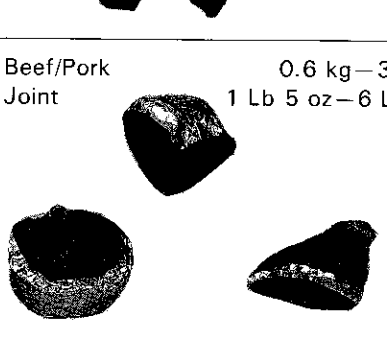 | 0.6 kg—3 kg<br>1 Lb 5 oz—6 Lb 10 oz | Shield the edge with foil strips about 2.5cm wide. Place joint with lean side face upwards (if possible).<br>When oven has stopped, turn over and shield the warm portions. After defrost time, stand wrapped in foil for 15—30 mins. |

NOTE: Foods not listed in the Guide can be defrosted using defrost setting.

# MORE/LESS Pad

You can use these pads for two ways.

## During operation

The cooking time can be increased or decreased in multiples of 1 minute by repeatedly touching MORE(▲)/LESS(▼) pad at the variable power.

### Before starting the easy reheat and easy defrost cooking

The cooking result will be adjusted by touching MORE(▲)/LESS(▼) pad once.

1. In case you need adjustment for Easy Reheat touch MORE(▲) or LESS(▼) pad after selecting one of the categories or entering quantity.
2. In case you need adjustment for Easy Defrost touch MORE(▲) or LESS(▼) pad after touching Easy Defrost pad or entering weight.
3. In case you need to cancel and change MORE(▲)/LESS(▼) pad.
   - To cancel MORE/LESS setting, touch the same pad again.
   - To change MORE to LESS setting, simply touch the LESS(▼) pad.
   - To change LESS to MORE setting, simply touch the MORE(▲) pad.

   You can select or change MORE/LESS setting after choosing the menu or entering the quantity.

* Suppose you want reheat Soup 2 servings not so hot.

| Step | Procedure | Pad Order | Display |
|---|---|---|---|
| 1. | Touch the EASY REHEAT pad. | EASY REHEAT | REHEAT FOOD |
| 2. | Select desired Easy Reheat setting. | 2 | REHEAT 2-1 |
| 3. | Touch number pads,to enter quantity. | 2 | REHEAT 2-2 |
| 4. | Touch LESS(▼) pad. | ▼ LESS | REHEAT 2-2 |
| 5. | Touch the AUTO MINUTE/START pad. | AUTO MINUTE START | HIGH REHEAT 2:58 COOK ▼ |

# CARE AND CLEANING

**Exterior:**
The outside may be cleaned with mild soap and warm water; rinse and dry with a soft cloth. Do not use any type of household cleaner or abrasive cleaner.

**Touch Control Panel**
Care should be taken in cleaning the touch control panel. If the control panel becomes soiled, open the oven door before cleaning. This will inactivate the control panel. Wipe the panel with a cloth dampened slightly with water only. Do not scrub or use any sort of chemical cleaners. Avoid the use of excess water.

**Interior walls:**
Cleaning is very easy because no heat is generated onto the interior surfaces. To clean the interior surfaces, wipe with a soft cloth and warm water. After each use wipe the waveguide cover in the ceiling of the oven with a soft damp cloth to remove any food splashes. Do not use a commercial oven cleaner, abrasive or harsh cleaners and scouring pads on any part of your microwave oven. For heavier soil, use mild soap; rinse thoroughly with hot water.

**Turntable/Roller stay:**
Occasionally it will be necessary to remove the turntable and Roller stay for cleaning, or to clean the floor of the oven. Wash the turntable and Roller stay in mild, soapy water. Dry with a soft cloth.
The turntable motor shaft is sealed, but excess water or spills should not be allowed to stand in this area.

**Door:**
Wipe the window on both sides with a damp cloth to remove any spills or spatter. Metal and plastic parts will be easier to maintain if wiped frequently with a damp cloth.

# SERVICE CALL CHECK

Please check the following before calling for service:

1. When the door is opened, does the oven lamp come on? YES _____ NO_____
2. Place one cup of water in a glass measure in the oven and close the door securely. Oven lamp should go off if door is closed properly. Programme the oven for two minutes on HIGH. Touch these pads:

   | 2 | 0 | 0 | AUTO MINUTE START |
   |---|---|---|---|

   A. Does the oven lamp light? YES _____ NO_____
   B. Does the cooling fan work? YES _____ NO_____
   (Put your hand over the rear ventilating opening.)
   C. Does the turntable rotate? YES _____ NO_____
   D. After two minutes, did an audible signal sound and cook indicator go off? YES _____ NO_____
   E. Is the water inside the oven hot? YES _____ NO_____

If "No" is the answer to any of the above questions, please check your wall socket and fuse.
If both the wall socket and the fuse are functioning properly, you should take your unit back to your dealer for repair or if this is not possible by telephoning one of the numbers listed you will be given details of your nearest SHARP approved service facility.

| | | | |
|---|---|---|---|
| LONDON | 01-936-9140 | BRISTOL | 0272-277897 |
| MANCHESTER | 061-833-0226 | LEEDS | 0532-455706 |
| BIRMINGHAM | 021-200-2492 | GLASGOW | 041-332-1720 |

SHARP

SHARP ELECTRONICS (UK) LTD.
Sharp House, Thorp Road,
Newton Heath, Manchester
M10 98E

TINS-A030WRRO Printed in U.K.